


FH Full-Height Base Cabinet Modification

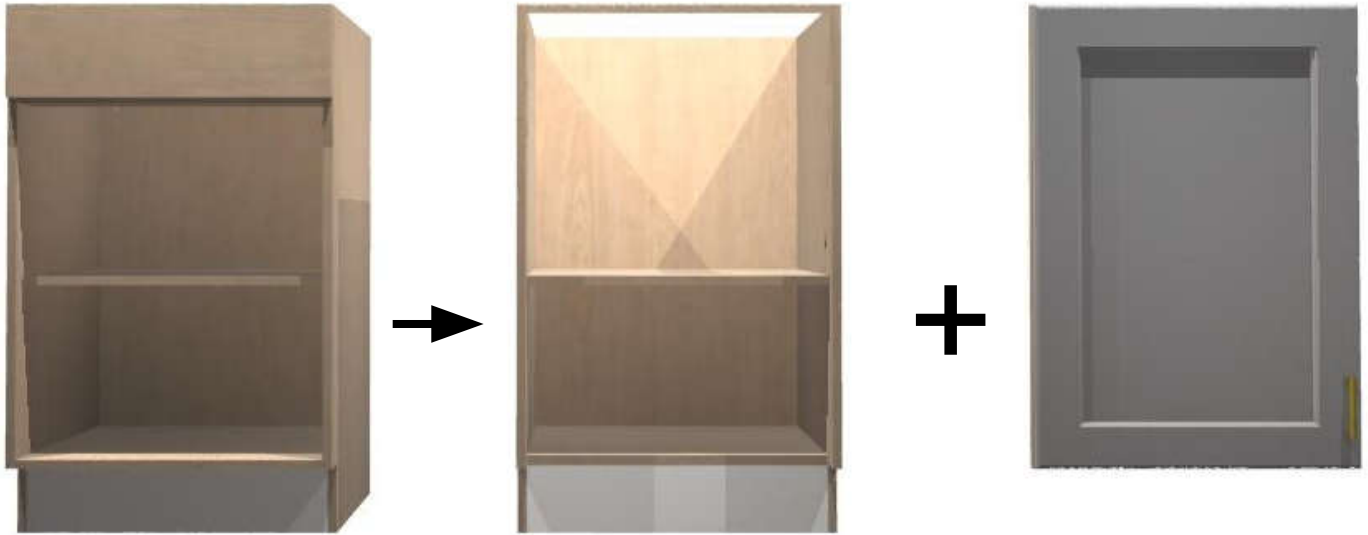

B21 Box

(Drawer Box & Slide Will Be Discarded)

W2130

Door

**How to install a organizers but
require a FH Full Height Base
Cabinet. (Revolution-Series Only)**

- 1. Remove the top drawer and the stretcher under the drawer.**
- 2. Use Upper Wall Cabinet door to fit the base cabinet.**
- 3. Remove the adjustable shelf if needed.**

